

SOHNNE®

ASSEMBLY INSTRUCTION

Corbusier LC2
Petit Modèle Loveseeat





Welcome Guide

www.sohnne.com

In the Box

Your LC2 Petit Modele Loveseat ships as a chrome frame plus five upholstered cushions. Identify every element below before you begin — assembly requires no tools.

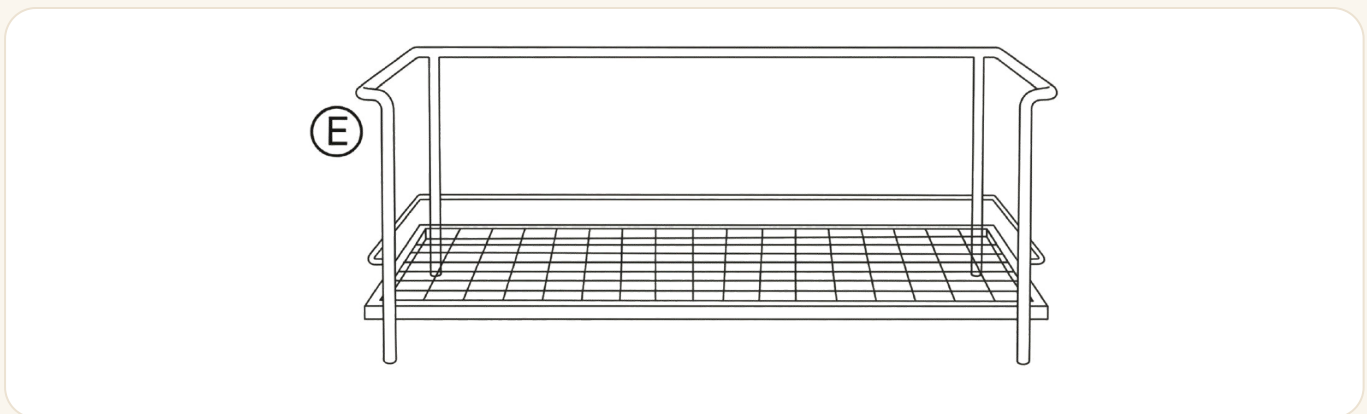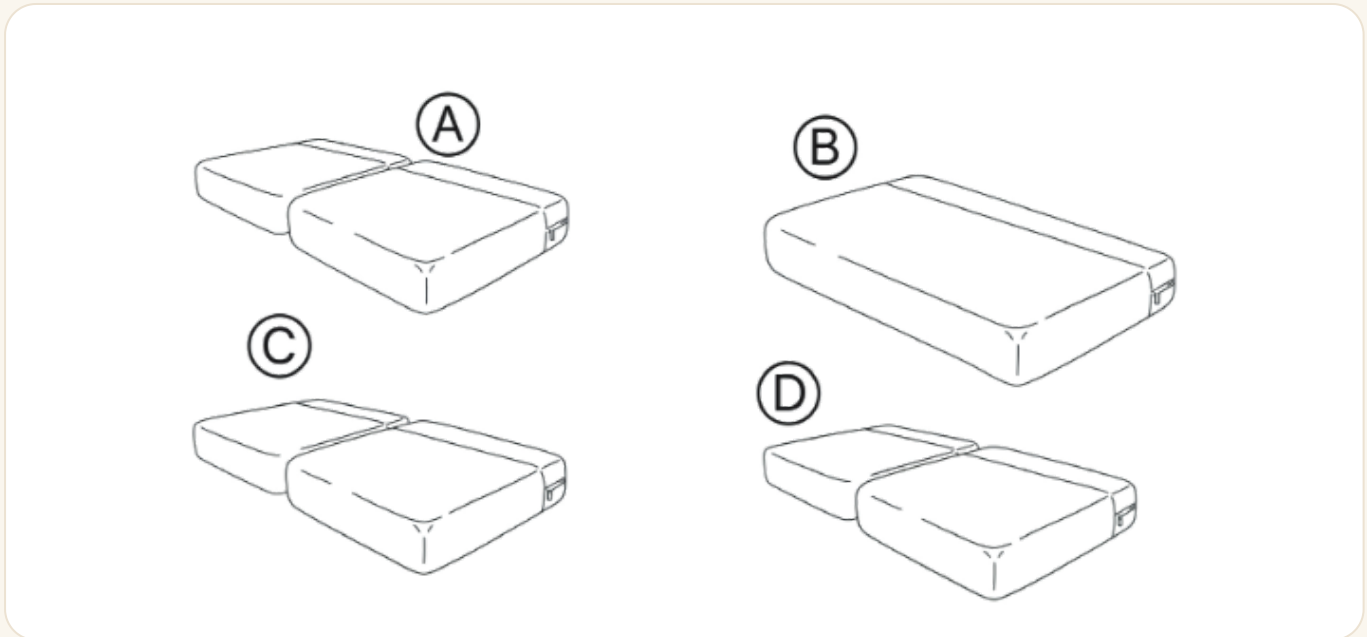

A Seat Cushion Top
QTY 2

B Seat Cushion Bottom
QTY 1

C Back Cushion
QTY 2

D Side Cushion
QTY 2

E Chrome Frame
QTY 1

TOOLS NEEDED
None · cushions only

ASSEMBLY

1

Place the frame upright

Position the metal frame (E) on the floor with the open top facing upward. Ensure all welds and joints are secure before proceeding.

2

Insert the bottom seat cushion


Place Seat Cushion Bottom (B) on the metal base grid. Center it within the frame, aligning the front edge with the front bar, and make sure the cushion sits flat and even.

3

Add the top seat cushions

Stack the two Seat Cushion Tops (A) directly over Seat Cushion Bottom (B). Press lightly so both layers sit securely and evenly together.

FRAME & SEAT CUSHIONS

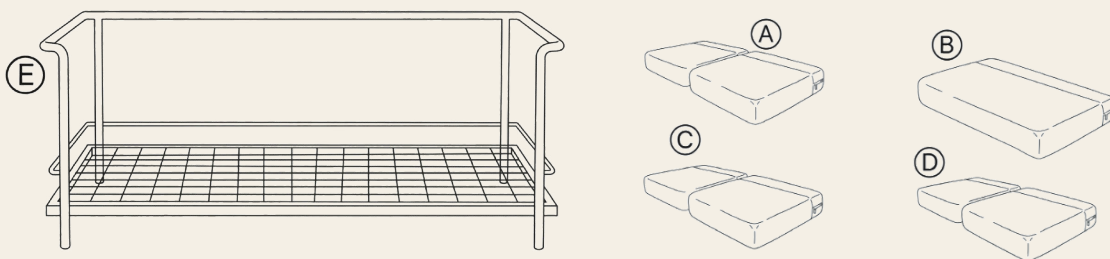

4

Install the side cushions

Insert the two Side Cushions (D) vertically on each side inside the armrests. Keep the stitched seams facing outward toward the chrome frame, then push down gently so they sit snugly against the seat.

5

Insert the back cushions


Place both Back Cushions (C) behind the seat cushions. Adjust until they sit evenly across the back, aligned with the frame's top rail.

6

Final alignment

Check that all cushions are squared and fit snugly within the frame. Ensure top edges are level with the chrome rails, then smooth out any wrinkles or uneven spots by hand.

FINISHED · LC2 LOVESEAT

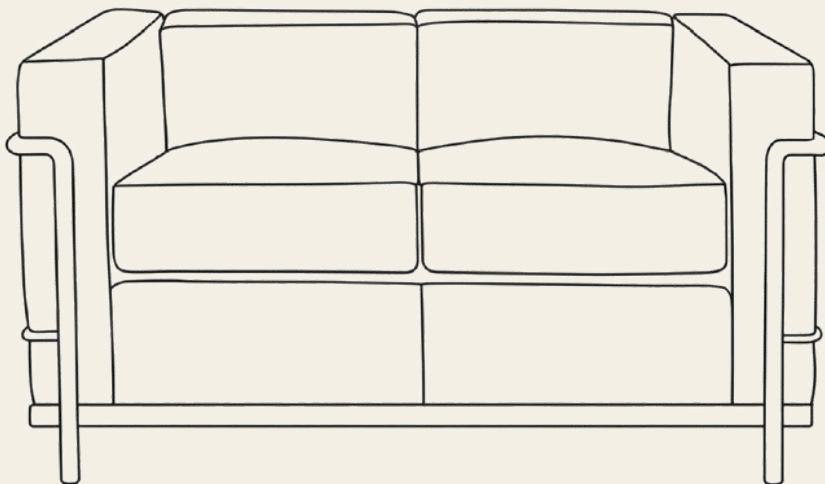

SOHNNE®

@sohnne

SHARE · REVIEW · EARN

Worth sharing.

\$100

FOR A VIDEO REVIEW

\$50

FOR A PHOTO REVIEW

 Tag us @sohnne

www.sohnne.com