

SOHNNE®

ASSEMBLY INSTRUCTION

# Jacobsen Swan Chair




# Welcome Guide

[www.sohnne.com](http://www.sohnne.com)

# In the Box

The Jacobsen Swan Chair arrives almost ready to use. Get to know its three parts — the upholstered seat shell, the gas-lift swivel column and the polished alloy base — before you put them together.

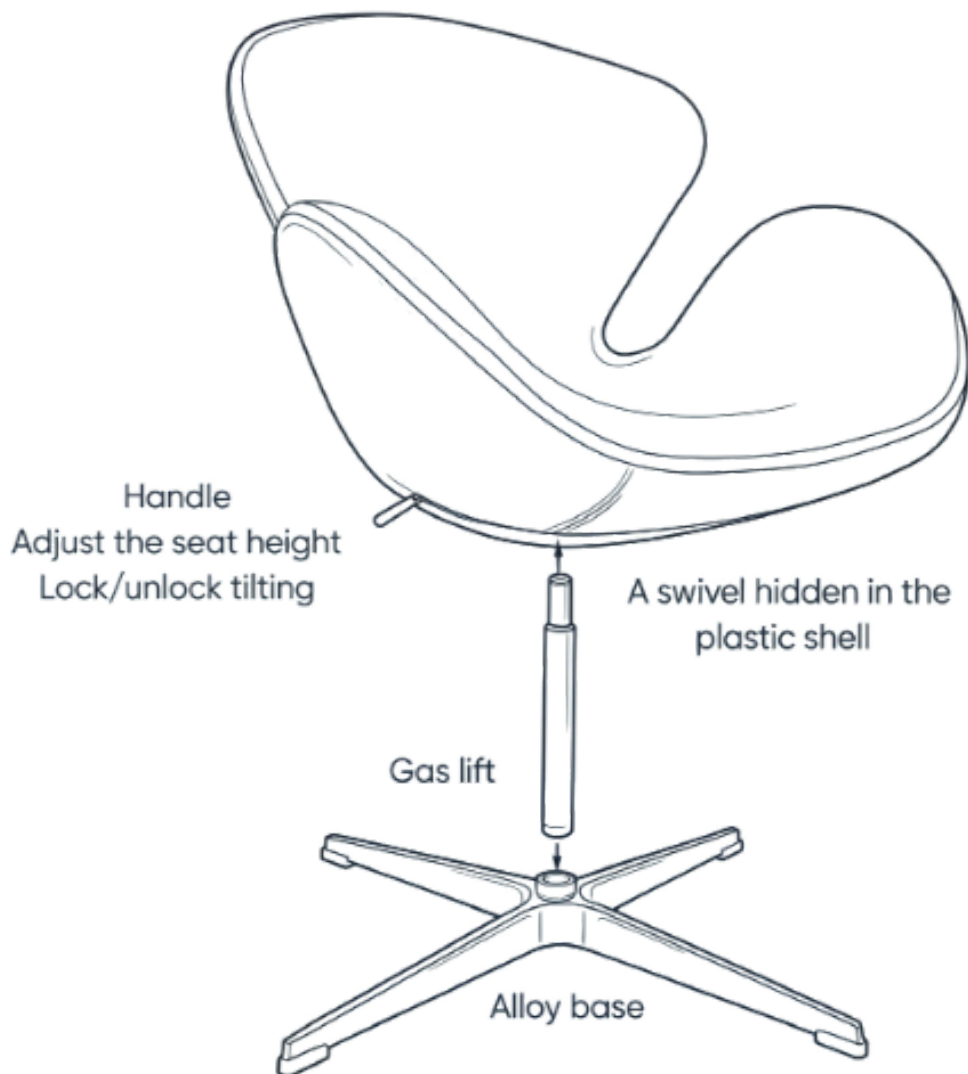

**A** Upholstered Seat Shell  
QTY 1

**B** Gas Lift Column  
QTY 1

**C** Four-Star Alloy Base  
QTY 1

**TOOLS NEEDED**  
None — tool-free assembly

# Assembly is very simple

Insert the gas lift into the alloy base, then attach the seat shell. There are no tools or fasteners required.

1

## Fit the gas lift into the base

Stand the four-star alloy base on the floor and drop the gas-lift column firmly into the centre socket. The tapered fit seats itself and holds the column upright.

2

## Attach the seat shell

Lower the upholstered seat onto the top of the gas lift. A swivel hidden inside the plastic shell receives the column — press down until it locates, then sit lightly to settle it home.

3

## Set height & tilt with the handle

Use the handle under the seat to adjust seat height and to lock or unlock tilting. Pull the handle outward when you want the chair to tilt; push it inward to lock the chair to an upright firm position. Do not adjust the handle while the chair is occupied.

### NOTE · TILT MECHANISM

The tilt mechanism is tightened at the factory for safety and may feel stiff at first. With normal use it will gradually soften to your preferred resistance.

SOHNNE®

@sohnne

SHARE · REVIEW · EARN

# Worth sharing.

\$100

FOR A VIDEO REVIEW

\$50

FOR A PHOTO REVIEW

📷 Tag us @sohnne

[www.sohnne.com](http://www.sohnne.com)